

Globe[®]
fire



Vulture
Outdoor Stove

Globe[®]
fire

Ch. Leibfried GmbH
An der Bundesstraße 2 49733 Haren/Ems
Germany
Tel: +49(0)5932-7334784
info@globe-fire.de www.globe-fire.de

CAUTION - Read the Assembly Instructions Carefully Before Use!

This stove is intended for outdoor use only!

Place the stove on a firm, stable, and non-combustible surface.

Keep the stove at a safe distance from flammable materials.

Handle with care: The outdoor stove becomes hot during use!

Keep children and pets at a safe distance from the stove during use.

Only burn wood or coal.

Never use petrol, oil, or other flammable liquids to light or fuel the fire.

Never extinguish the fire with water. Sudden cooling may cause the cast iron to explode and may result in injury.

The stove is finished with a heat-resistant coating that provides a limited level of protection against corrosion. Over time, exposure to weather and moisture may cause surface rust to develop.

Surface rust is a natural result of use and environmental exposure and is not considered a manufacturing or quality defect.

It is therefore not covered by the guarantee.

Maintenance: Remove rust with a wire brush, clean the surface and recoat with heat-resistant lacquer.

Guarantee

Globe-fire provides a **24-month** guarantee on the supplied appliance.

The guarantee covers the proper functioning of the appliance and includes free replacement of the spare parts where a material or workmanship defect is present. There is no obligation to remedy the defect by performing work such as fitting or installation.

Excluded from this guarantee are parts subject to normal wear and tear, as well as parts that are directly exposed to the flames, e.g. fire grates, sealant and paint damage. Damage resulting from improper use – such as the use of unsuitable fuels, or failure to follow the operating instructions – is also not covered.

Repairs carried out under this guarantee do not extend the original guarantee period. The guarantee period commences on the date of the invoice.

The right of return expires after commissioning (first firing)

Any complaints must be reported to the dealer from whom the appliance was purchased.

22 Parts & 18 Screws



Firepot



2 Hotplates



Flame guard



Grill and baking tray



Support Grill/ Baking tray



Fire guard



Pipe connection



Hotplate handle



Varnish and brush



Glove



legs



2 Ornamental plates



2 handles



6 x A

4 x B

4 x C

4 x D




Rain hood




2 pipes 50 cm

VULTURE OUTDOOR STOVE

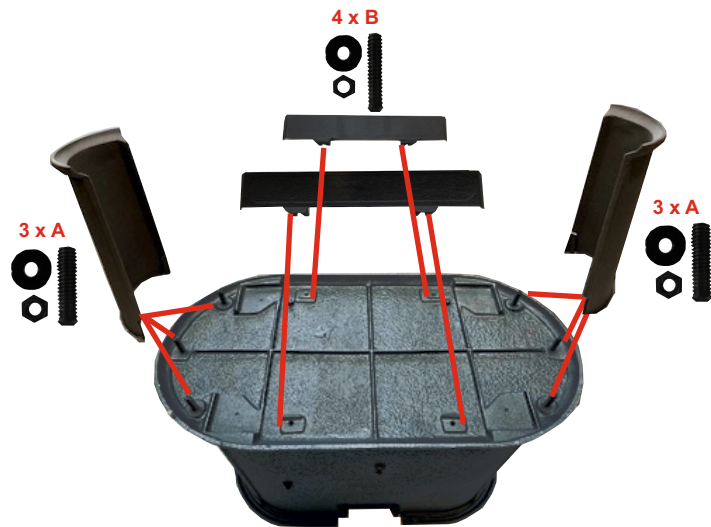

1. Turn fire pot upside down to fix legs and ornamental plates.
Tighten all screws (A & B).


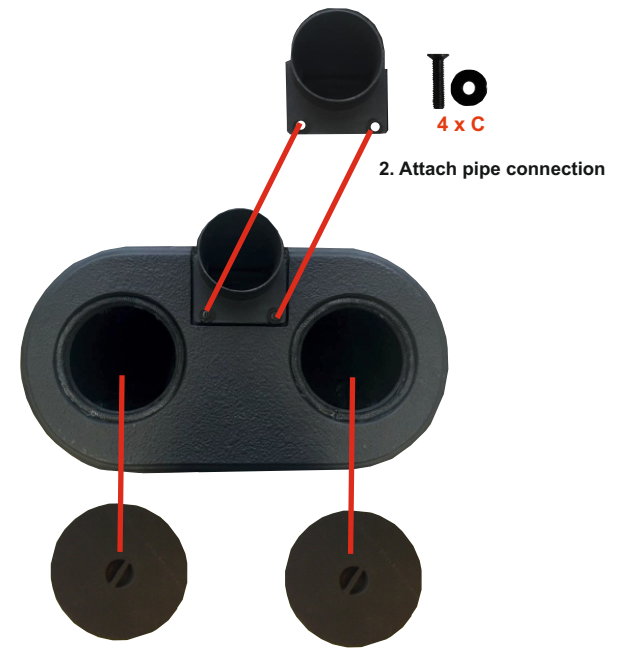


2. Attach pipe connection

3. Put the hot plates on the fire pot




4. Attach handles

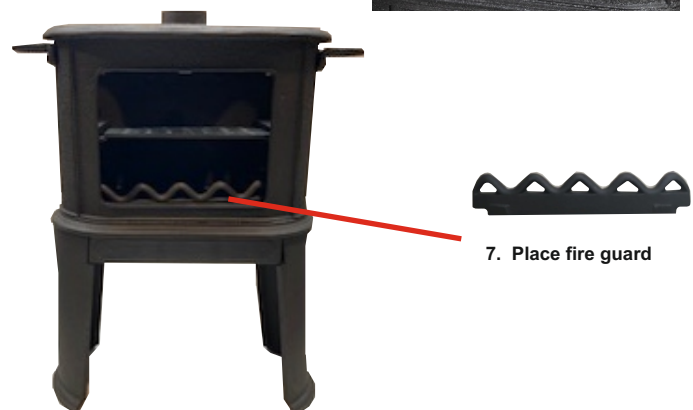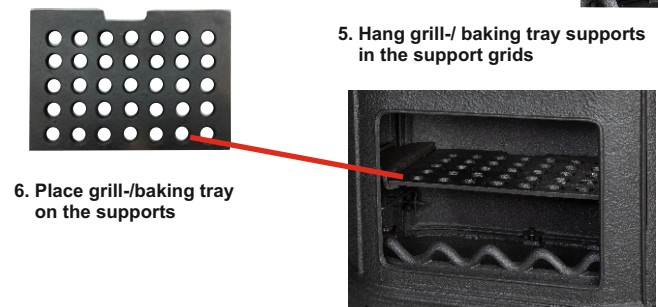

8. Fix pipes together

9. Attach the rain hood

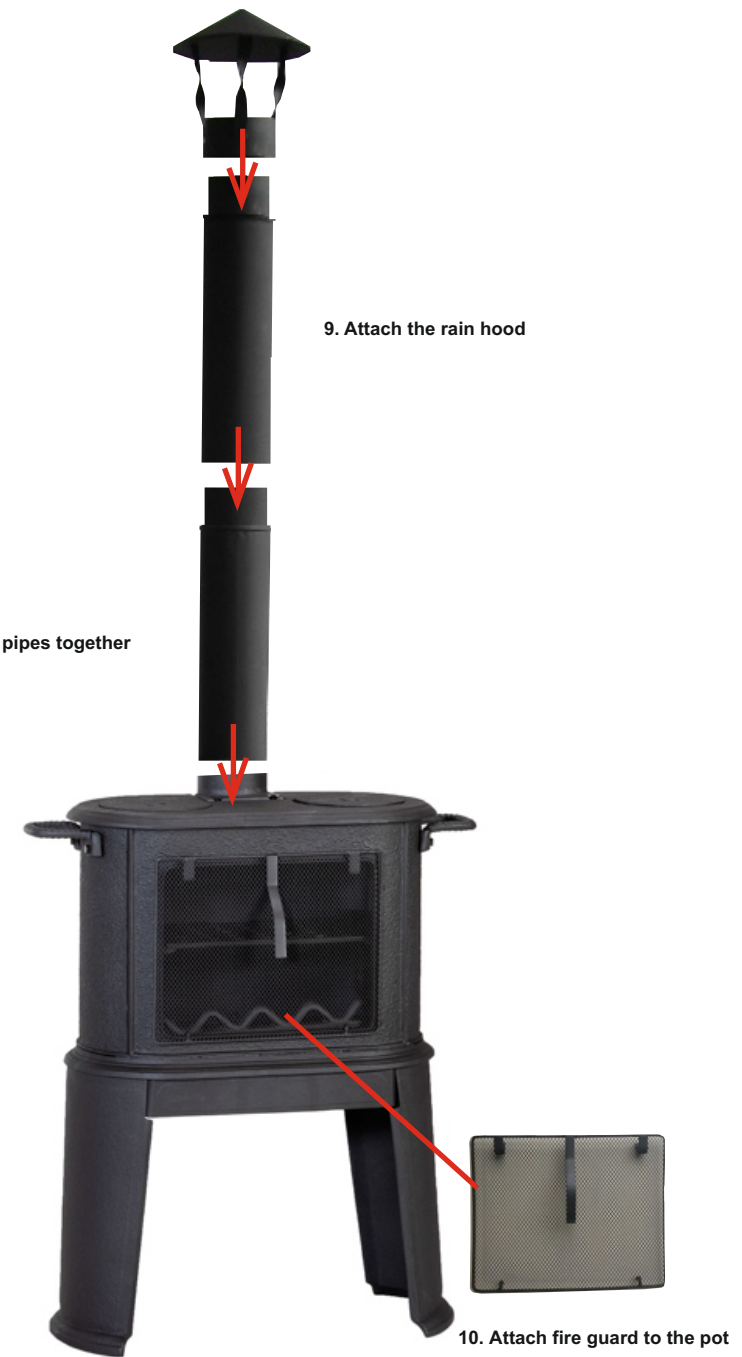

LARGE GRILLPLATE



SET OF 2 SMALL GRILL PLATES



BUTLER TABLE



Slide the butler table over the handle

