



## Assembly instructions



Ch. Leibfried GmbH  
An der Bundesstraße 2 49733 Haren/Ems  
Germany  
Tel: +49(0)5932-7334784  
info@globe-fire.de    www.globe-fire.de



Volcano  
Outdoor Stove

## Before use read assembly instructions carefully !!!

Handle with care: The outdoor stove becomes hot when used.  
Take care that the outdoor stove is not near flammable materials and is standing on firm ground.

This stove is only for outdoor use.

Be careful with children.

Only burn wood or coal.

Never use petrol, oil etc.

Never put out the fire with water. The cast iron may explode.

The varnish gives a thin layer of protection from rust. After a time the stove may become rusty again. ( Rust is not quality problem and so is not covered the guarantee).

Maintenance: Remove rust with a wire brush and varnish with a heat proof varnish.

### GARANTIE

24 months guarantee.

The guarantee is only valid under normal use and correct use of the stove and does not include: overheating, scratches in the varnish parts which normally show wear after use and all parts that are in contact with the fire ( glass, fire grid, joins etc ).  
Insufficient maintenance and use of parts other than the original ones is not covered by the guarantee.

Before using the stove you are expected to be acquainted with the users instructions and guarantee terms.

After use it is not possible to return the stove.

After eventual repairs the guarantee will not be extended.

 
21 parts & 12 screws




# VOLCANO OUTDOOR STOVE



1. Turn fire pot upside down to fix legs

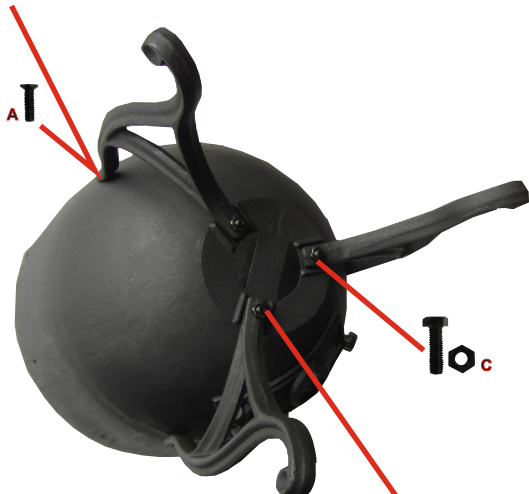


2. Attach distance ring to the 3 legs

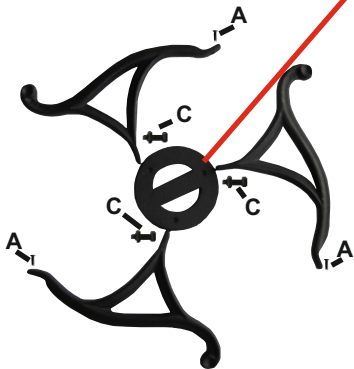 


3. Attach pipe connection



 4. Attach handles

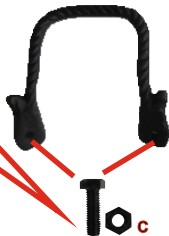

 5. Put grid in the fire pot

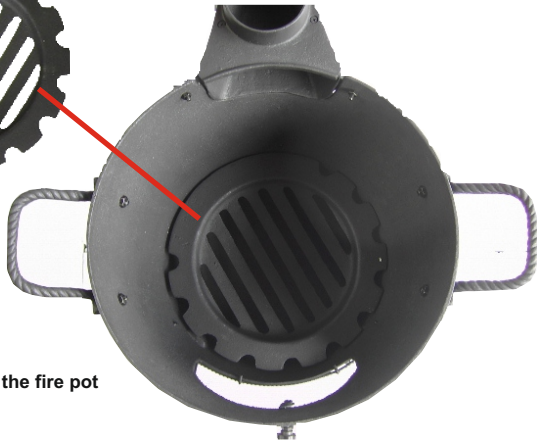



6. Assemble the rings

7. Put lid on fire pot



8. Attach fire guard to the pot

9. Fix pipes together



10. Attach the rain hood

## GRILLING PLATE



## STEAM & COOKINGSET



# BUTLER TABLE

