

Ch. Leibfried GmbH An der Bundesstraße 2 49733 Haren/Ems Germany Tel: +49(0)5932-7334784

info@globe-fire.de www.globe-fire.de



Outdoor Stove

Before use read assembly instructions carefully !!!

Handle with care: The outdoor stove becomes hot when used.

Take care that the outdoor stove is not near flammable materials and is standing on firm ground.

This stove is only for outdoor use.

Be careful with children.

Only burn wood or coal.

Never use petrol, oil etc.

Never put out the fire with water. The cast iron may explode.

The varnish gives a thin layer of protection from rust. After a time the stove may become rusty again. (Rust is not qualityproblem and so is not covered the guarantee).

Maintenance: Remove rust with a wire brush and varnish with a heat proof varnish.

GARANTIE

24 months quarantee.

The guarantee is only valid under normal use and correct use of the stove and does not include: overheating scratches in the varnish parts which normally show wear after use and all parts that are in contact with the fire (glass, fire grid, joins etc).

Insufficient maintenance and use of parts other than the original ones is not covered by the guarantee.

Before using the stove you are expected to be acquainted with the users instructions and guarantee terms.


After use it is not possible to return the stove.

After eventual repairs the guarantee will not be extended.

22 Parts & 18 Screws



VULTURE BUITENKACHEL

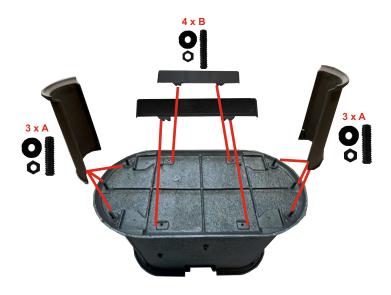

Turn fire pot upside down to fix legs and ornamental plates.
Tighten all screws (A & B).






3. Put the hot plates on the fire pot



2.



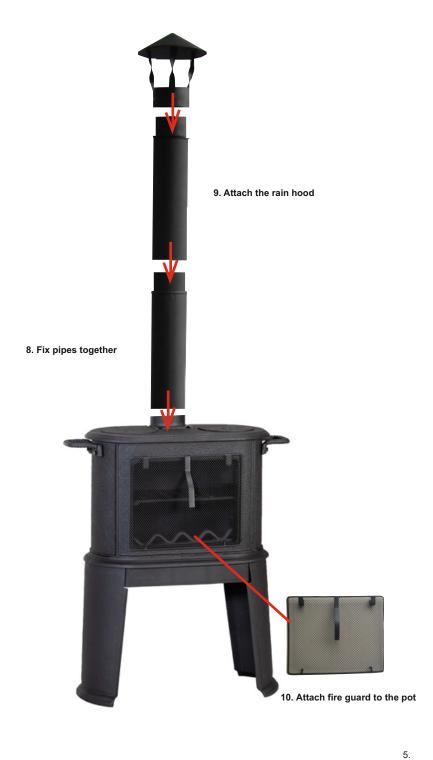

LARGE GRILLPLATE

SET OF 2 SMALL GRILL PLATES





BUTLER TABLE



